


# Wireless Telephone Quick Reference Guide

## Nortel Meridian

### M2616 Station Set

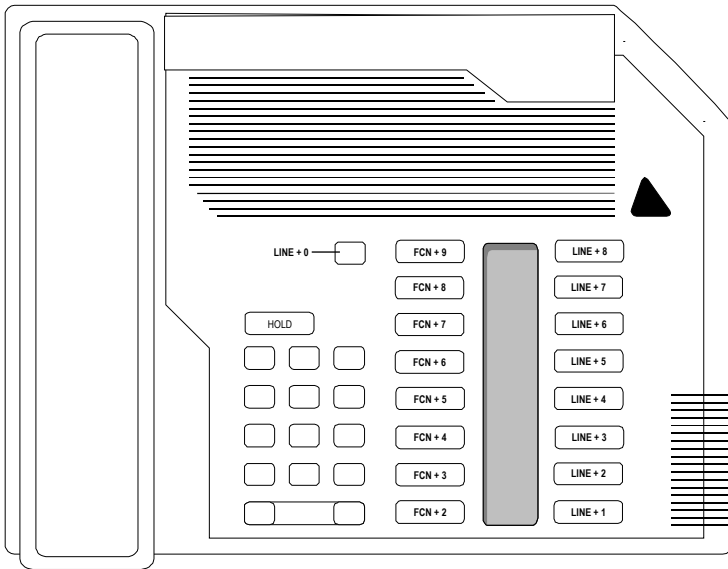

**M2616 Station Set**

Pressing **LINE** followed by a digit (1-7) on the Wireless Telephone is equivalent to pressing one of the line keys on the M2616 (Keys 0-6).

**LINE + 8** is reserved for local programming, as on the station set. **LINE + 0** is equivalent to the **RLS** button.

Pressing **FCN** followed by a digit (2-9) on the Wireless Telephone is equivalent to pressing one of the dual memory buttons on the M2616 (Keys 8-15).

Function Key Strokes	Default settings	Fill In Your Feature Settings
FCN + 1	MUTE	
FCN + 2	XFER	
FCN + 3	CONF	
FCN + 4	LAST NO	
FCN + 5	FWD	
FCN + 6	MSG	
FCN + 7	PICK	
FCN + 8	RING AGAIN	
FCN + 9	EXIT MENUS	
LINE + 0	RLS	



**Wireless Telephone**

**On/Off** Press and hold **PWR**. Two chirps on, one chirp off

**Make a call** Press **START** to get dial tone.

**Hang up** Press **END**. Be sure to do this at the end of each call.

**Answer call** Press **START**. Line indicator comes on steady when the call is answered.

**Answer second call** Press **HOLD** to put your current call on hold, or **END** to hang up. Press **LINE** + the digit that is flashing.

**Hold** Press **HOLD**

**Take off Hold** Press **LINE** followed by the digit for the line on hold, which will be flashing.

**Mute On/Off** Press **FCN** and then **1**

**Function** Pressing **FCN** while off hook allows you to scroll through menu screens.

**User Options** Press **FCN** while on hook to change handset settings.

**TRC**  
TELECOM RESOURCE CORPORATION  
trcnetworks.com

Have A Question?  
Need More Info?  
Call Us: 1 877 390 1166

**SpectraLink**  
Wireless@work