


Wireless Telephone Quick Reference Guide

Avaya MERLIN LEGEND/MAGIX PBX MLX16DP

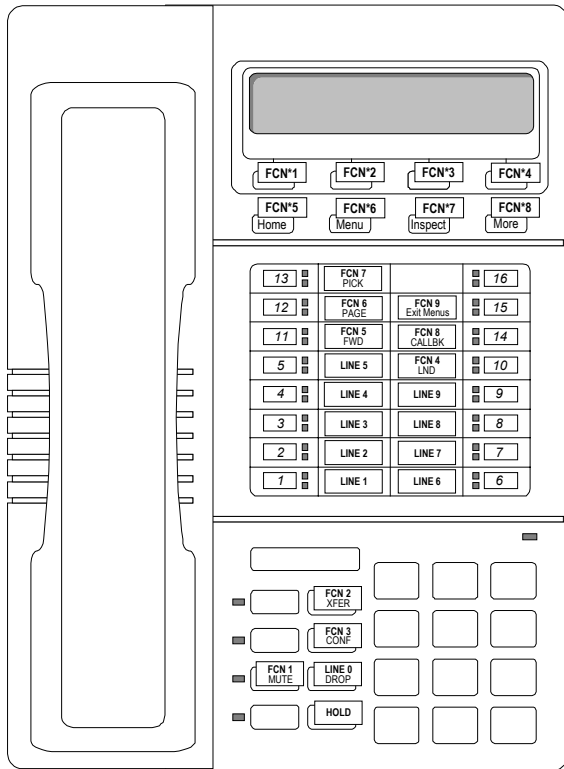

MLX16DP

Pressing **LINE** followed by a digit (**1-7**) on the Wireless Telephone is equivalent to pressing one of the line keys on the MLX16DP.

FCN followed by **1-9** on the Wireless Telephone is equivalent to using feature buttons on the station set.

FCN followed by * and a digit **1-8** allows you to access the eight programmable soft keys under the station set display.

Function Key Strokes	Default settings	Fill In Your Feature Settings
FCN + 1	MUTE	
FCN + 2	XFER	
FCN + 3	CONF	
FCN + 4	LND	
FCN + 5	FWD	
FCN + 6	PAGE	
FCN + 7	PICK	
FCN + 8	CALLBK	
FCN + 9	EXIT MENUS	
FCN * 1		
FCN * 2		
FCN * 3		
FCN * 4		
FCN * 5		
FCN * 6		
FCN * 7		
FCN * 8		
LINE + 0	DROP	



Wireless Telephone

- On/Off** Press and hold **PWR**. Two chirps on, one chirp off
- Make a call** Press **START** to get dial tone.
- Hang up** Press **END**. Be sure to do this at the end of each call.
- Answer call** Press **START**. Line indicator comes on steady when the call is answered.
- Answer second call** Press **HOLD** to put your current call on hold, or **END** to hang up. Press **LINE** + the digit that is flashing.
- Hold** Press **HOLD**
- Take off Hold** Press **LINE** followed by the digit for the line on hold, which will be flashing.
- Mute On/Off** Press **FCN** and then **1**
- Function** Pressing **FCN** while off hook allows you to scroll through menu screens.
- User Options** Press **FCN** while on hook to change handset settings.

