


# Wireless Telephone Quick Reference Guide

## NEC NEAX ETJ-16DC-2 Desk Set

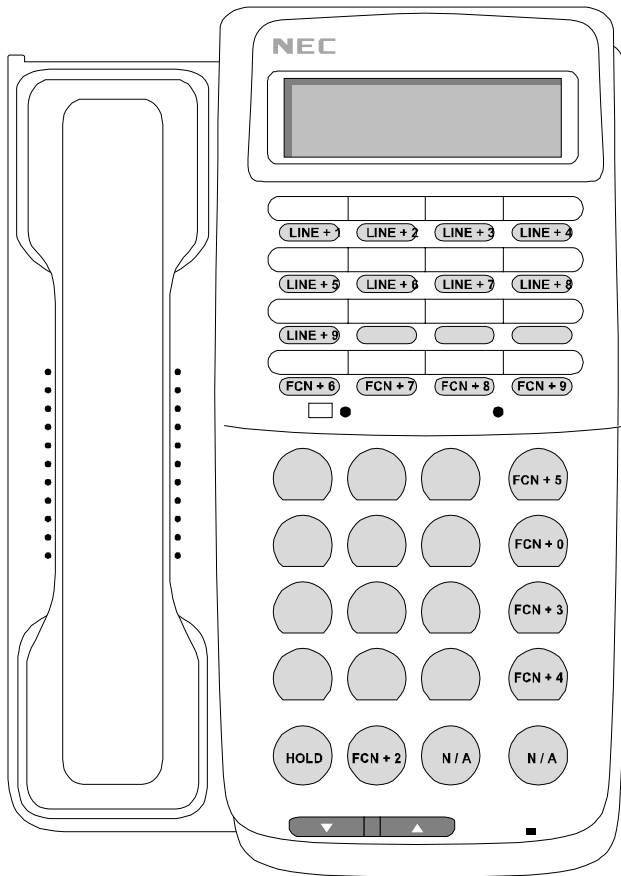

### ETJ-16DC-2 Desk Set

The figure above shows the mapping of the ETJ-16DC-2 display set to the SpectraLink Wireless Telephone

Pressing **LINE** followed by a digit (1-9) on the Wireless Telephone is equivalent to pressing one of the line keys on the ETJ-16DC-2.

Pressing **FCN** followed by a digit (6-9) on the Wireless Telephone is equivalent to pressing one of the four programmable function keys on the desk set.

Function Key Strokes	Default settings	Fill In Your Feature Settings
FCN + 1	MUTE	
FCN + 2	TRF	
FCN + 3	CNF	
FCN + 4	LNR/SPD	
FCN + 5	RECALL	
FCN + 6		
FCN + 7		
FCN + 8		
FCN + 9		
FCN + 0	FCN	
FCN + *	EXIT MENUS	



### Wireless Telephone

- On/Off** Press and hold **PWR**. Two chirps on, one chirp off
- Make a call** Press **START** to get dial tone.
- Hang up** Press **END**. Be sure to do this at the end of each call.
- Answer call** Press **START**. Line indicator comes on steady when the call is answered.
- Answer second call** Press **HOLD** to put your current call on hold, or **END** to hang up. Press **LINE** + the digit that is flashing.
- Hold** Press **HOLD**
- Take off Hold** Press **LINE** followed by the digit for the line on hold, which will be flashing.
- Mute On/Off** Press **FCN** and then **1**
- Function** Pressing **FCN** while off hook allows you to scroll through menu screens.
- User Options** Press **FCN** while on hook to change handset settings.

